

Warning

- 1,Keep it safe from falling and dropping
- 2,Keep it distance from any strong magnetic interference objects like electrical machine to avoid strong radio waves that might be damaging the product and affect the sound or image quality.
- 3,Don' t expose the product directly to high temperatures and strong sunlight
- 4,We recommend using high quality Micro SD Card for the best results.
- 5,Don' t place your Micro SD card near strong magnetic objects to avoid data error.
- 6,In case of overheating, unwanted smoke or unpleasant smell from the device, unplug it immediately from the power outlet to prevent hazardous fire.
- 7,Keep it safety from children while on charging.
- 8,Stored the device in a cool, dry and dust free location.

Product features

- With a water proof casing, allowing you to film 30 meters under water scene.
- HD screen display for convenient videos and image playback.
- Detachable battery for easy replacement and help extend
- product lifespan
- Record videos while charging
- HD 16 Mega pixel wide angle lens
- HDMI Output
- Web Camera
- Supports SD card memory expandable up to 64GB(Maximum)
- Supports multiple video recording formats:4K/1080P/720P/ WVGA
- Supports MP4 recording format
- Supports multiple photo shooting modes: Single shot &Snapper
- Video encryption enabled
- Super lightweight, small in size and available in 8 colors

Product structure



1.Power/Mode 2.UP/WI-FI 3.DOWN 4.LENS



5.TF card slot 6.USB slot 7.HDMI 8.OK



9. Battery Door 10. Battery Door Latch

GETTING STARTED

To power ON:






Press the Power/Mode Button.

To power OFF:

Press and hold the Power/Mode Button.

OVERVIEW

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes and settings. The modes will appear in following order:

	Video	Record Video
	Photo	Capture a single photo
	Time-lapse	Time-lapse video
	Play back	playback Video and photo
	Settings	Adjust camera settings

SETTINGS



Press the OK Button to enter the settings menu. Repeatedly press the Power/Mode Button to cycle through options and press the OK Button to select desired option.

Video setting

Video Resolution	4K 30FPS /2.7K 30FPS /1080P 60FPS 1080P 30FPS /720P 120FPS 720P 60FPS /720 30FPS
Video sound	ON/OFF
Time-lapse	OFF/0.5S/1S/2S/5S/10S/30S/60S
Loop Recording	OFF/2min/3 min /5 min
Slow motion	1080P@60FPS/720P@120FPS <input type="checkbox"/>

Photo

Pixel set	16M/12M/8M /5M/2M
Timed	3S/5S/10S/20S/OFF
Auto	3S/10S/15S/20S/30S/OFF
Drama shot	3P/S、 5P/S、 10P/S、 OFF <input type="checkbox"/>
Exposure	-2---+2
White balance	Auto/Sunny/Cloudy/Incandescent light/Fluorescent light
Image Rotation	ON/OFF
WIFI	ON/OFF
Light source frequency	Auto/50HZ/60HZ


LED indicator light	ON/OFF
Auto Screen saver	10S/20S/30S/OFF
Auto shutdown	1min/3min/5min/OFF
Time watermark	ON/OFF

SETTINGS


Language	English/German/French/Spanish/Italian/Portuguese/traditional/Chinese simplified/Chinese/Japanese/Russian
Date-time	2015/01/01 12:00:00
Format	Confirmation/cancel
Reset	Confirmation/cancel

Micro SD	4K@30FPS/1080P@60FPS	1080P@30FPS	720P@60FPS
32GB	120min	240min	320min
16GB	60min	120min	160min <input type="checkbox"/>


Video mode

- 1, To record video, Verify the camera is in Video mode
- 2, If the Video icon "  " on screen is showing, press the OK key to start video, at the same time also has "a red icon" flashing.
- 3, Click the OK button again to stop the video, also the red icon disappear.


Picture mode

- 1, To take picture, Verify the camera is in picture mode.
- 2, If the picture icon "  " on screen is showing, press the OK key to take pictures.

Slow motion

- 1, To record slow motion video, Verify the camera is in slow motion mode.
- 2, If the slow motion Video icon "  " on screen is showing, press the OK key to start video, at the same time also has "a red icon" flashing

Time-lapse

- 1, Enter the setting menu, open this function, return to video mode.
- 2, If the slow motion Video icon "  " on screen is showing, press the OK key to start video, at the same time also has "a red icon".

Playback

Playing back video and photos

- 1, verify the camera is in playback menu
- 2, press up or down button to select file, press OK button to playback video

Battery

- 1, install and remove the battery
 - a. down upon battery cover can be open it.
 - b. according to the battery label plus or minus sign and the direction of the arrow, right put the battery into the camera, until the installation in position.
 - c. take out battery, push away the battery cover can take out the

battery

2, charge

- a. connect the computer or the power adapter can be recharged.
- b. directly to the car charger can be recharged in the car.
- c. can charge while video function.(inside the function table Settings required to open the car mode)
- d. power off can be charged.

CAMERA WIFI APP

1,Download the APP client and install it to the smart phone, which displays the “XDV” application icon after installation. Apple WLAN,direct search “XDV”, click install. After the installation of the mobile phone interface will appear a APP application icon. Click to enter the APP "XDV" interface .

2,The open WIFI function

- a. Select the "WIFI" menu, press "OK" button to enter, select "open",the screen will show the WIFI icon, SSID:*****, PWA2:*****
- b. click the UP button to return. At this time to open the phone to set the WIFI function, to find a new set of WIFI name of the network,
- c. The connection after entering the new WIFI password and confirm the connection, the connection after the success of the LCD on the Connected/ display MAC:*****.
- d. At this time to open the phone has been installed “XDV” APP client, and search to add the camera ID code, after the completion of the camera and video operations can be performed.

Parameter

LCD	2.0LTPS
LENS	170 degree A + high resolution wide Angle lens
Language	English/German/French/Spanish/Italian/Po Chinese,simplified Chinese/Japanese/Russian language
video	4K 30FPS / 2.7K 30FPS/ 1080P 60FPS/ 1080P 30FPS 720P 120FPS/ 720P 60FPS/ 720 30FPS
video format	MP4□

compression format	H.264
Photo	16M/14M/12M/8M/5M
Memory	Micro SD UP TO 64GB
Picture mode	Timed , Auto, DramaShot
Light source frequency	50Hz/60Hz
USB	USB2.0
Power	5V 1A
Battery	900MAH
Video time	1080P/ 90min
Charge time	About 3 hours
System	Windows XP/Vistaor Above/Win7/Mac os □